

# Assembly Instruction Sheet #IS-1606P5 For Style 1606P5

**Tools Required:** Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

**Light Source:** (1) 120V LED 2-W DIMMABLE (3000K)

**Estimated Assembly Time:** 15-30 minutes  
**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

## Package Contents

- Aluminum x3
- GLASS x1
- Fixture Body x1

## Hardware Contents

PART	DESCRIPTION	QUANTITY
BB	Electrical Marrets	2pcs
CC	Screw	2pcs



### STEP 1 - Release Mounting bracket from Ceiling Canopy .




Figure 1

### STEP 2 - Attach Mounting bracket to Outlet Box

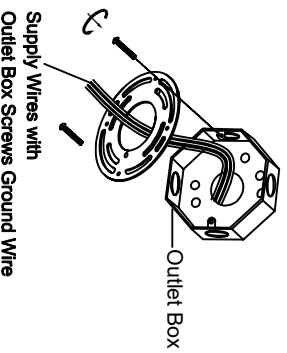


Figure 2

### STEP 4 - Wire Connections

A. Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

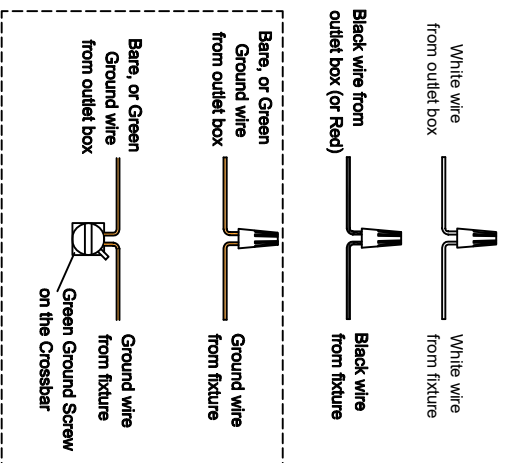


Figure 4

### STEP 5 - Install Ceiling Canopy to Ceiling

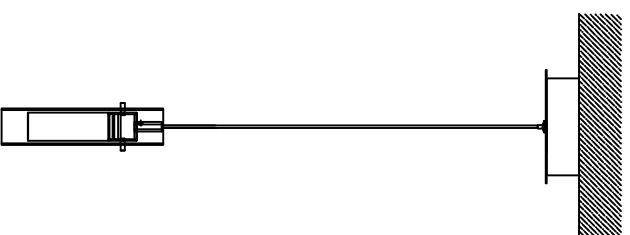


Figure 5